

Situation 3 Low Battery Voltage

ONE flashing red LED

If you encounter a power chair with a low battery warning, the batteries are nearly discharged. Always assume the batteries need to be recharged. Plug the power chair into a standard wall outlet and allow the batteries to charge overnight. The battery indicator should then return to a full charge and the power chair should work properly. If this is not the case, perform the charger diagnostics from “Situation One: No power to the power chair” and replace the appropriate component.

Notes: