
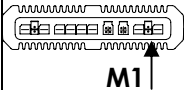


## 9.6 Flash codes

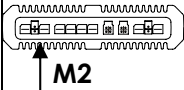

If a fault condition exists, the System Status Led on the Master Remote displays a Flash Code. A flash code is a specific number of short flashes, followed by a pause.

Flash Code	Fault source	Meaning
1	DX Module	<p>An Auto Download (see 7.3) has occurred.</p> <ul style="list-style-type: none"> <li>• Turn off the DX System, then turn it on again.</li> </ul> <p>The DX System is not programmed correctly.</p> <ul style="list-style-type: none"> <li>• Reprogram the DX System.</li> </ul> <p>The DX BUS connection of a DX Module is faulty</p> <ul style="list-style-type: none"> <li>• Check the DX BUS cables and the DX BUS connections.</li> <li>• Replace the cables when necessary.</li> </ul> <p>If the Status LED on another Module is flashing too, there may be an internal fault in that Module.</p> <ul style="list-style-type: none"> <li>• Reprogram the faulty Module.</li> <li>• If reprogramming does not help, replace the faulty Module.</li> </ul> <p>An expected critical module is not detected (for example the DX Lighting Module, see also 6.6.1.2 or 6.6.2.3).</p> <ul style="list-style-type: none"> <li>• Check that the 'is critical'-parameters have the correct value</li> <li>• Check the DX BUS connections and (if applicable) the power connections of the critical module</li> <li>• Replace the critical module</li> </ul>
2	DX Accessory	<p>A DX Module with a Slow/Stop input (for example a CLAMB) is set to slow or stop. This may not be a fault, it is probably caused by the seat position being extended. Flash Code 2 is shown to indicate that the chair may go slower than expected.</p> <ul style="list-style-type: none"> <li>• Move the seat back to the neutral position.</li> </ul> <p>There is a fault in an accessory device attached to a DX Module (excluding the Power Module). For example:</p> <ul style="list-style-type: none"> <li>-a disengaged clutch</li> <li>-a light bulb is short circuit or open circuit</li> <li>-an actuator terminal is shorted to Battery '+'. <ul style="list-style-type: none"> <li>• Check all accessory devices connected to your DX System.</li> </ul> </li> </ul>

Flash Code	Fault source	Meaning
3	Motor 1 / L 	The motor is not connected to the Power Module, or there is a short-circuit in the motor connection. <ul style="list-style-type: none"> <li>• Check that the motor cables are not loose or damaged</li> <li>• Disconnect the motor plug from the Power Module and <ul style="list-style-type: none"> <li>◦ Check with a multi meter that there is no connection between the motor pins and the parkbrake pins.</li> <li>◦ Measure the resistance between the motor pins. This should roughly be the motor + cable resistance (neither open-circuit nor short-circuit).</li> </ul> </li> <li>• The motor brushes may be worn or too stiff <ul style="list-style-type: none"> <li>◦ Turn the wheels to reconnect</li> <li>◦ Replace the motor brushes or the motor</li> </ul> </li> </ul>
4	Motor 2 / R 	
5	Parkbrake 1 (M1/Left)	Parkbrake 1 fault: A single parkbrake is connected to M2 instead of M1. <ul style="list-style-type: none"> <li>• Connect the single parkbrake to M1.</li> </ul>
6	Parkbrake 2 (M2/Right)	Parkbrake 2 fault: The <u>Park Brake</u> parameter (4.3.3.1) has the value 'Dual' when a single parkbrake is used. <ul style="list-style-type: none"> <li>• Set the Park Brake parameter to 'Single' with the Wizard.</li> </ul> <p>Parkbrake 1 or Parkbrake 2 Fault (if the above does not apply): The parkbrake is not connected to the Power Module, or there is a short-circuit in the parkbrake connection.</p> <ul style="list-style-type: none"> <li>• Disconnect the Motor/Parkbrake plug from the Power Module and <ul style="list-style-type: none"> <li>◦ Check with a multi meter that there is no connection between the motor pins and the parkbrake pins</li> <li>◦ Check with a multi meter that there is no open-circuit between the parkbrake pins.</li> </ul> </li> </ul> <p><b>Note:</b> a mechanical parkbrake release can also cause a parkbrake fault, see section 2.4.4: <u>Mechanical parkbrake release</u></p>

**Note:** these faults are not affected by the Left/Right Motor Swap (4.3.2.7) setting.  
Flash code 3 or 5 always means the motor or parkbrake that is connected to the M1 connector.

#### When a Motor Fault or a Parkbrake Fault occurs:

- Swap the motor/parkbrake connectors, if they are not keyed.
  - If the chair has two parkbrakes, you can simply swap the motor connectors on the Power Module, if the motor connectors are not keyed.
  - If the chair has only one parkbrake, this method can not be used. Swapping the connectors will result in a M1 Parkbrake Fault with only one parkbrake, because a single parkbrake must always be connected to M1.
- When after swapping the fault moves from Motor 1/Parkbrake 1 to Motor 2/Parkbrake 2 or vice versa, the fault is caused by the motor/parkbrake or by the cables. Only when the fault does not move after swapping, the Power Module itself can be faulty.

Flash Code	Fault source	Meaning
7	Low Battery	<p>The battery voltage is too low: it has fallen below 17V. The most probable cause of this fault is a loose battery terminal.</p> <ul style="list-style-type: none"> <li>• Check the batteries, the battery terminals, the cables, the fuses and the thermal circuit breakers</li> <li>• Batteries may be empty: charge the batteries</li> <li>• Batteries may be damaged or too small: replace the batteries</li> </ul>
8	Over Voltage	<p>The battery voltage has exceeded 32V.</p> <ul style="list-style-type: none"> <li>• The batteries may be overcharged.</li> <li>• If driving downhill, slow down and turn on the lights (if fitted).</li> <li>• Enable High Voltage Rollback (see also 2.2.4.3).</li> </ul> <p>If this fault occurs during battery charging, the battery charger is defective or not adjusted correctly.</p> <ul style="list-style-type: none"> <li>• Check that the open circuit voltage of the battery charger is in accordance with the limits of the battery manufacturer, and is less than 32V.</li> </ul> <p>If this fault occurs during regenerative braking (when stopping or travelling down a slope) and the batteries are not full, the battery connector may make intermittent contact. During a lost connection the braking energy can not be routed towards the battery, therefore the system voltage becomes too high.</p> <ul style="list-style-type: none"> <li>• Check the battery cables and connectors.</li> </ul>
9 10	DX BUS cable fault: CANL wire CANH wire	<p>An invalid voltage has been detected on the DX BUS CANH or CANL line. This fault condition results in Limp Mode (see 9.1)</p> <ul style="list-style-type: none"> <li>• Check the DX BUS cables for damage.</li> <li>• Check that there is no short-circuit between the pins of the DX BUS cable. An open-circuit or short-circuit on another DX Module can cause this fault.</li> </ul> <p>If the Hazard Lights were already switched on when the DX System was turned on, sometimes Flash Code 10 occurs.</p> <ul style="list-style-type: none"> <li>• Turn off the Hazard Lights, turn off the DX System then turn the DX System on again.</li> </ul>
11	Stall Timeout	<p>The motor current has been at, or close to, current limit for longer than the Stall Timeout parameter value.</p> <ul style="list-style-type: none"> <li>• The motors may not be strong enough for the chosen route (the route is too steep). <ul style="list-style-type: none"> <li>◦ Turn off the DX System, let it cool down, then turn it back on again and choose another route.</li> </ul> </li> <li>• The wheels may be rubbing on the frame. <ul style="list-style-type: none"> <li>◦ Make sure that the wheels can turn freely.</li> </ul> </li> <li>• The motors may be faulty. <ul style="list-style-type: none"> <li>◦ Have the motor(s) checked by a service technician.</li> </ul> </li> </ul>
12	Module Mismatch	<p>The data in the DX System for a DX Module is corrupt or incompatible with that module.</p> <ul style="list-style-type: none"> <li>• Reprogram the DX System.</li> </ul> <p>There is a compatibility problem between two or more DX Modules in the DX System. The powerchair will be disabled.</p> <ul style="list-style-type: none"> <li>• Consult your Dynamic Service Centre.</li> </ul>